


WHEELY-X

PLAY User Guide

Components	1
Installation	2-3
User Guide	4-5
Precautions · Specifications	6
Maintenance · Storage	7
FAQ	8
After-sales Service & Support	9

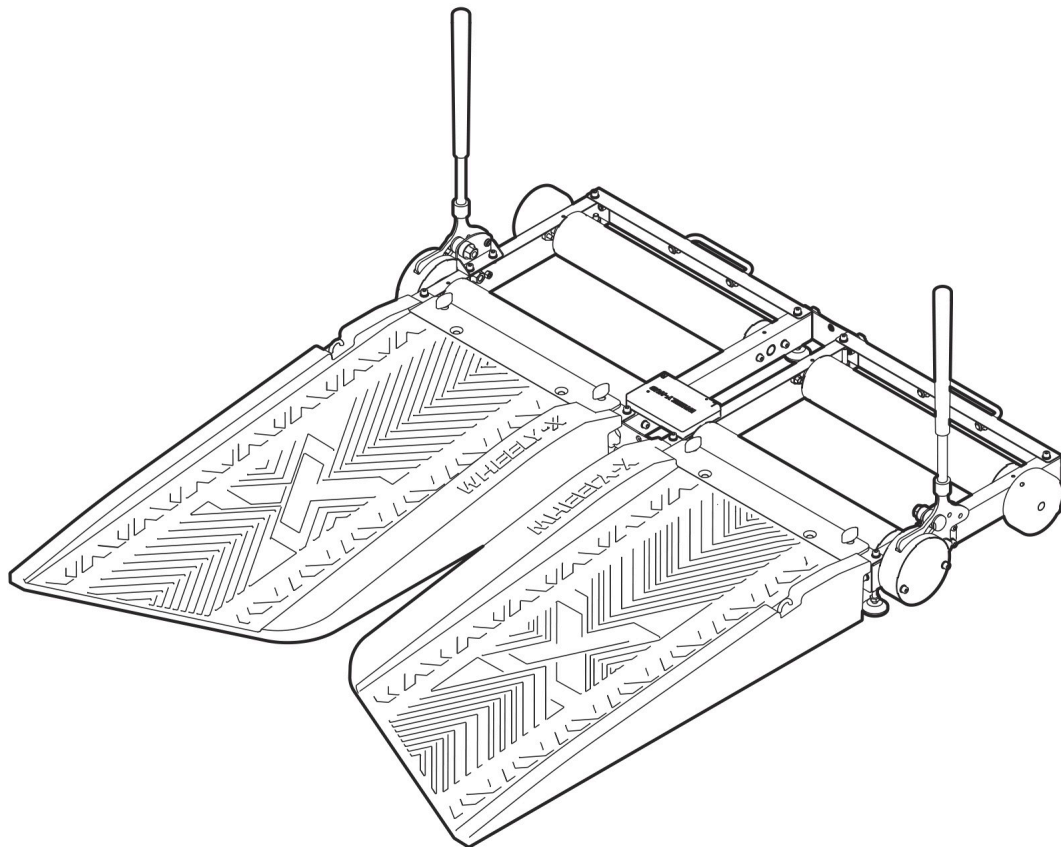

Components

1. Ramp Panel

2. Roller Plate (detachable weights fitted)

3. Tablet Holder

4. Wheelchair Safety Hook

5. T-Wrench

6. Cross Bolt

7. T-Bolt

8. Safety Chest Belt


9. Roller Locking Lever

10. WHEELY-Hub (sensor)

11. Spare Magnet for WHEELY-Hub

12. USB-C Cable


13. Roller Connector Plate

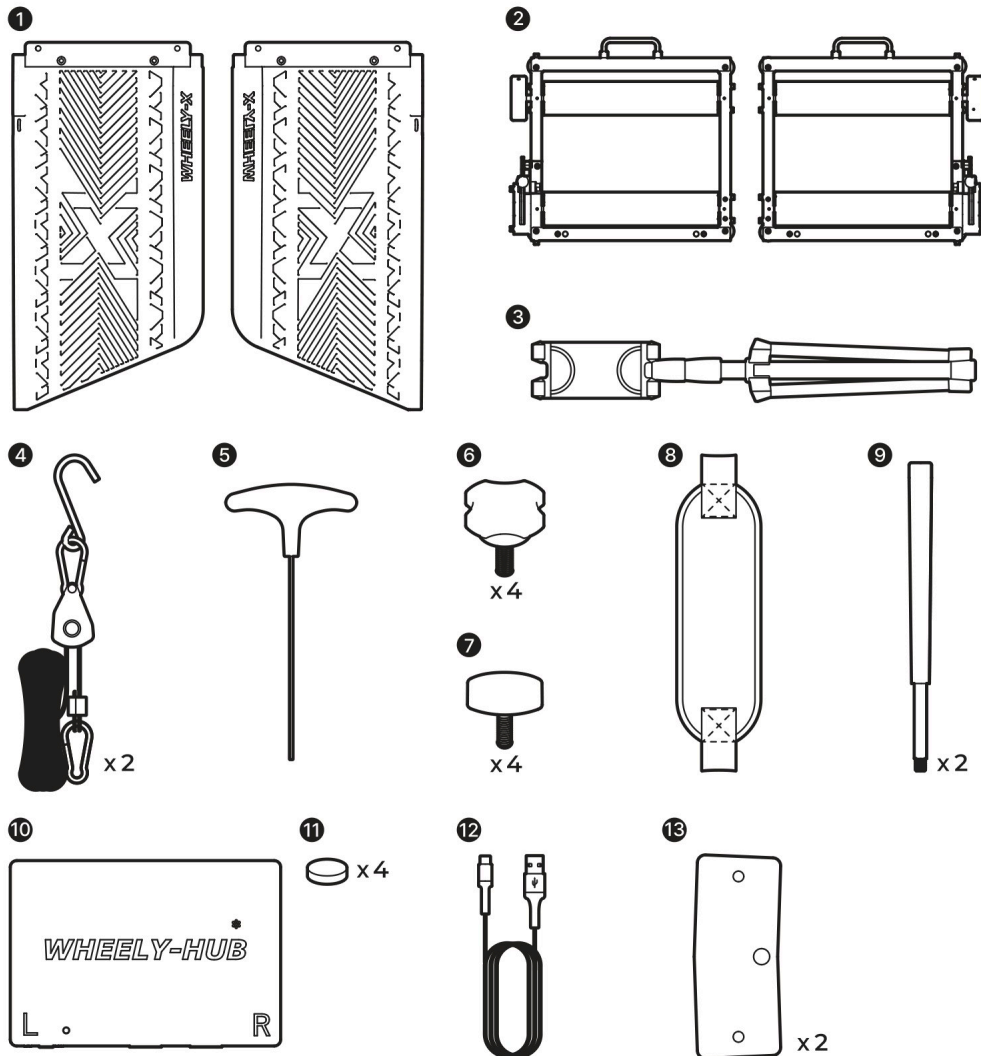

Installation


✦ Before installation

A flat surface without a slope, within
1.2 m wide × 3 m long

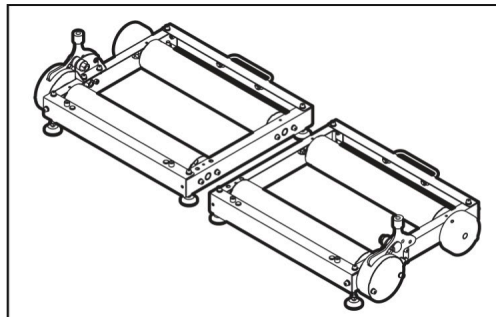


Step 1. Position the Roller Plates

- Place the left and right roller plates side by side as shown.

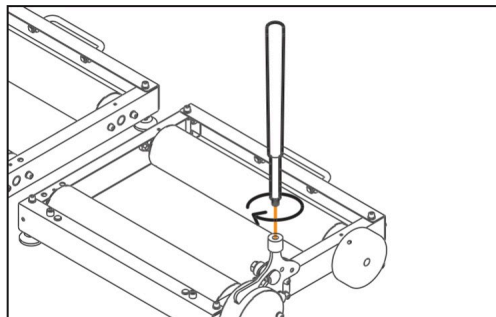

Step 2. Secure the Roller Locking Levers

- Tighten the two roller locking levers clockwise.

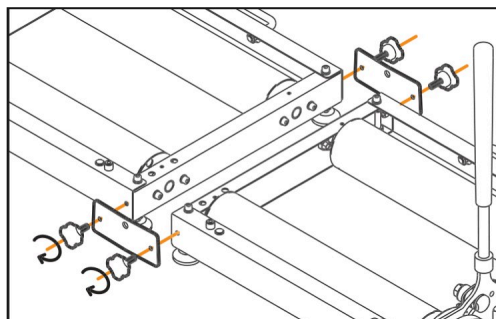


Step 3. Connect the Roller Plates

- Place the two connector plates between the left and right roller plates and fix them with four cross bolts, turning clockwise.

Installation


✳ Before installation

A flat surface without a slope, within
1.2 m wide × 3 m long

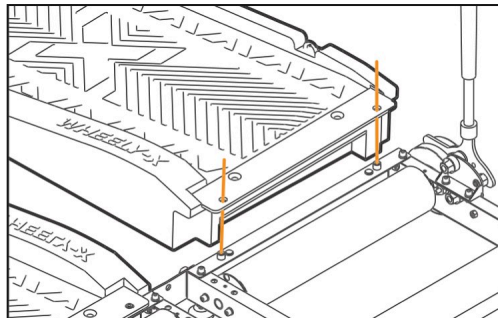


Step 4. Attach the Ramp Panels

- Place the ramps with the "WHEELY-X" logo facing inward and fit the ramp holes onto the protrusions of the roller frame.

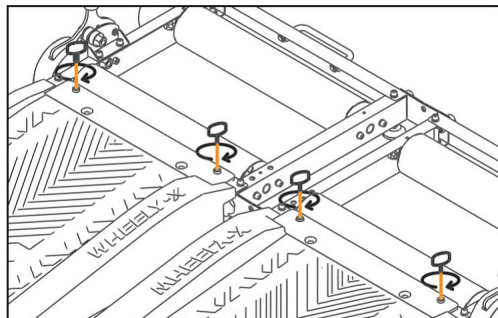

Step 5. Secure the Ramp Panels

- Tighten the four T-bolts clockwise into the ramp holes.

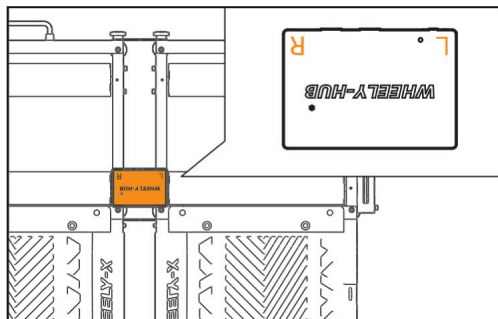


Step 6. Install the WHEELY-Hub

- Fit the WHEELY-Hub into the upper holes of the roller connector plate as shown.

User Guide


Step 1. Remove Surrounding Obstacles

- Clear away anything around WHEELY-X that could block movement or cause harm.

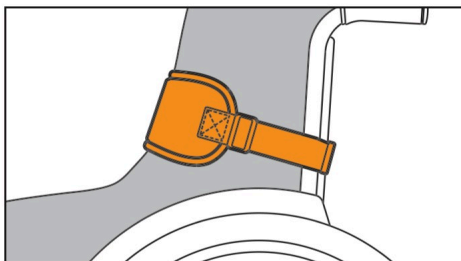

Step 2. Fasten the Safety Chest Belt

- Before boarding, use the chest belt to secure the wheelchair and the user's upper body.

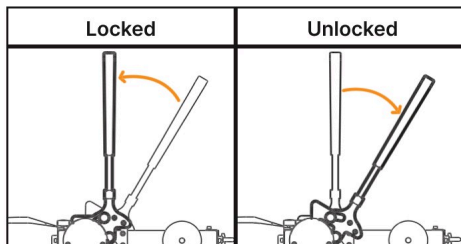

Step 3. Check the Roller Locking Levers


- Make sure the levers on both sides are securely locked.

Step 4. Boarding


- WHEELY-X is for manual wheelchairs only. Do not use power wheelchairs or scooters.
- Keep both wheelchair tires inflated to at least 65 psi.
- Users who find it hard to get on or off alone should have a guardian or caregiver help.
- Back up the ramps until the rear wheels are on the rollers.

User Guide

Attaching and Removing the Weight Plate

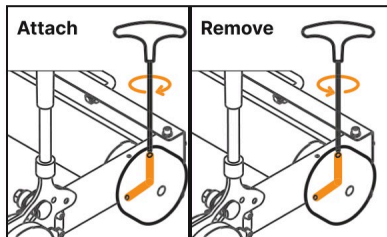

Insert the T-wrench into the two holes of the weight plate and turn it counterclockwise to remove the plate.

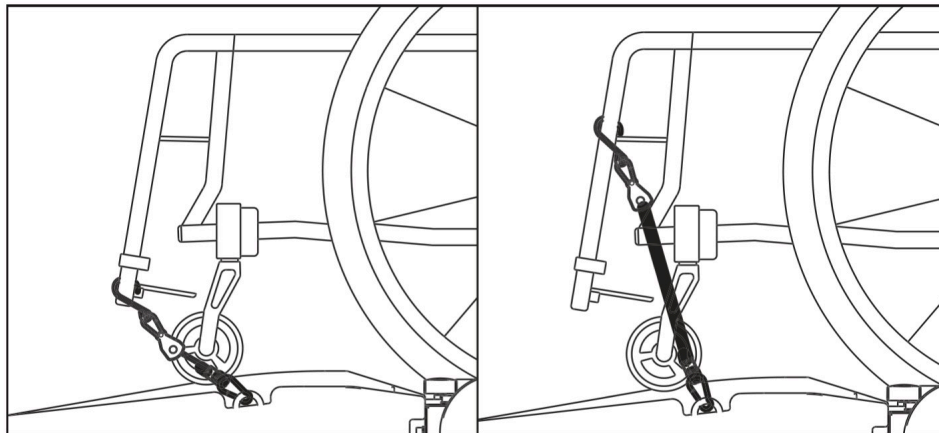

Step 5. Secure the Wheelchair

- Secure the wheelchair with the safety hooks, then pull both roller locking levers back.
- During intense exercise the wheelchair can shift sideways and cause a fall.



Step 6. Getting Off After Exercise

- After exercising, push both roller locking levers forward to 90° and check the rollers are fixed.
- Release the safety hooks, check the area in front is clear, then roll down the ramps slowly.

Precautions

- The total weight is 26.8 kg (59.1 lbs). Take care when installing and moving it.
- The maximum load, including the wheelchair, is 150 kg (330 lbs).
- Unauthorized disassembly or modification beyond the original setup may compromise safety.
- Do not attach parts not recommended by the manufacturer.
- Strong impacts or drops may cause internal damage and malfunction.
- Swallowing parts can cause serious injury. Keep out of reach of infants and children.

Product Specifications

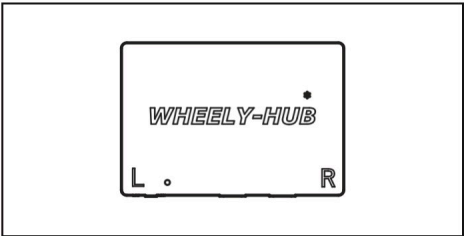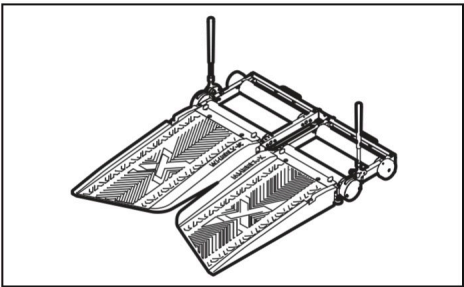

WHEELY-X

Size	Roller 133 × 110 × 55.5 cm Ramp 90 × 46 × 11.3 cm
Weight	Total 26.8 kg Roller 24 kg · Ramp 2.8 kg
Maximum load	150 kg (wheelchair included)
Ramp climbing angle	4°–6°
Roller camber angle	2°

WHEELY-Hub

Charging	USB-C · 5V 1A
Connectivity	Wireless: Bluetooth 5.0 Wired: USB-C

WHEELY-X app

Recommended	Android 11 or iOS 13 Octa-core CPU · 4 GB RAM Bluetooth 5.0
Minimum	Android 9 or iOS 11 Octa-core CPU · 2 GB RAM Bluetooth 4.1

Maintenance

Roller Plate

- The rollers are steel; leftover moisture can cause rust and shorten their life.
- Wipe light dirt with a dry cloth. For heavy dirt, use a damp cloth, then dry completely.

Ramp Panel

- The ramps can be wiped with a damp cloth or washed with water. Dry them thoroughly with a dry cloth before use or storage.

Cleaning Agents to Avoid

- Do not use detergents, alcohol, bleach, solvents or other chemicals — they damage, discolor and degrade the surface.

Storage

Removable Components

- Roller Plate ×2 · Roller Locking Lever ×2 · Ramp Panel ×2

Storage Conditions

- Keep indoors in a dry place, away from direct sun, heat and the outdoors, and out of reach of children and pets.

Original Packaging

- For long-term storage, use the original box and cushioning to prevent damage.

Before Storage

- Clean and dry all parts before storing. After long storage, run a safety check before use.

Q. The game program (WHEELY-X) won't start.

A. It needs an internet connection. ① Check the PC's internet connection ② check the internet line ③ press the refresh button at the top right of the "Ant Journey" screen.

Q. A pop-up asks me to check the sensor connection.

A. ① Check that the WHEELY-Hub (sensor) switch is ON ② check that the USB-C cable between the sensor and the PC is plugged in at both ends, then press the refresh button at the top right of "Ant Journey".

Q. I spin the wheels but the character doesn't move.

A. Check the hub's L-R orientation, the switch (ON) and the PC cable, then press the refresh button at the top right of "Ant Journey". If it still doesn't work, switch the sensor and the game off and on again.

Q. How do I charge the WHEELY-Hub (sensor)?

A. It charges automatically while connected to the PC. To charge it separately, use a USB-C charger (5V 1A).

Q. I forgot the PC password.

A. No password is set at installation. Kangsters cannot look up a password you set yourself.

Q. Can I delete AnyDesk from the desktop?

A. It is the program for remote inspection and support. If you delete it, you cannot receive remote support.

After-sales Service & Support

Warranty Policy

1. Warranty period

WHEELY-X unit 2 years, WHEELY-Hub sensor 1 year from the date of purchase

2. Coverage

Material and manufacturing defects in the ramp panels, roller plates, detachable weight plates, roller locking levers and WHEELY-Hub

3. Exclusions

Consumables; normal wear and tear; damage from misuse, neglect, accidents or unauthorized modification; damage from fast chargers (5V 2A or higher); routine maintenance costs

4. Claims

- ① Send a description of the issue and proof of purchase to Customer Support.
- ② Customer Support checks whether the warranty applies.
- ③ Once confirmed, the faulty part is repaired or replaced.

5. Transfer

The warranty stays valid if the product is transferred within the warranty period, provided proof of purchase and a transfer request are sent.

6. Disclaimer

This warranty gives you specific legal rights; you may have other rights that vary by country or region. Our liability for defects is limited to the repair or replacement described here.

Kangsters Customer Support


+82-31-506-0625

info@kang-sters.com

Service requests:
kangsters.com/en/contact

www.kangsters.com

EMPOWERING EVERYBODY TO THRIVE

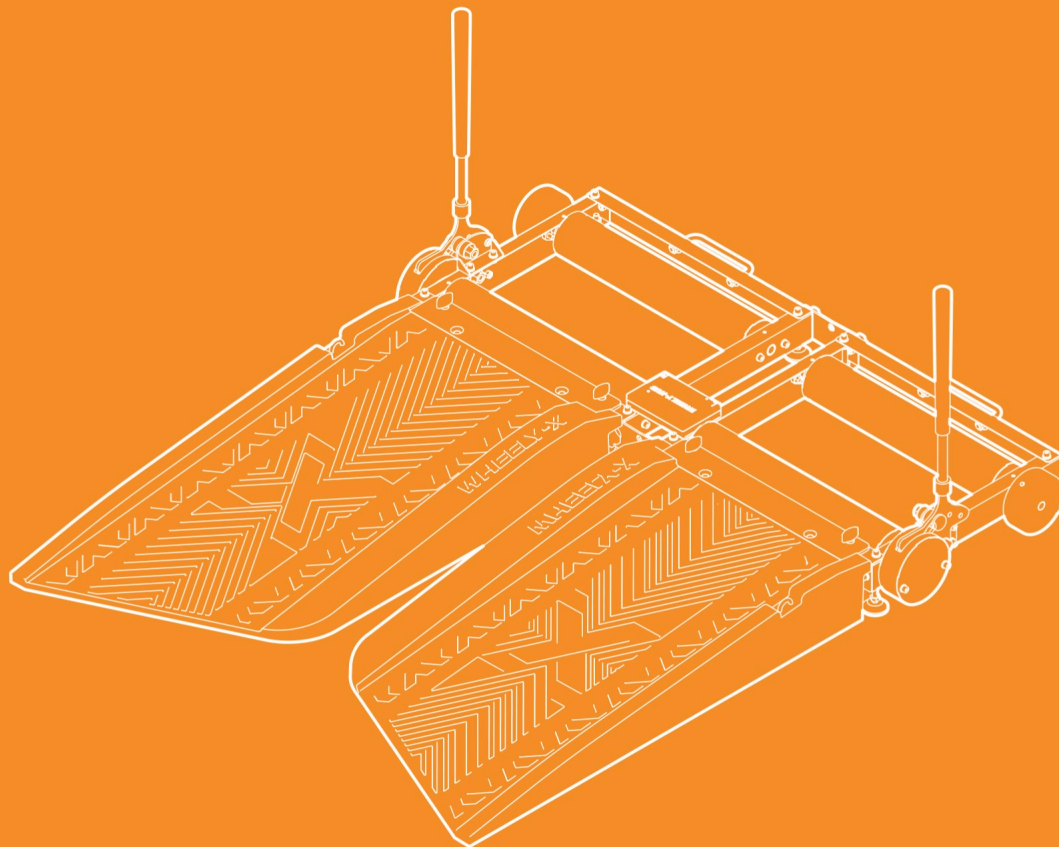

KANGSTERS