

WHEELY-X

Rental Guide

For Rental Customers

Check on Arrival 1


Set Up 1

Power On · Use · Power Off 2

If Something Goes Wrong 2

Returning 2

1 WHEELY-X + gaming laptop + LG
StanbyME GO + manual wheelchair
(per 1-day rental)

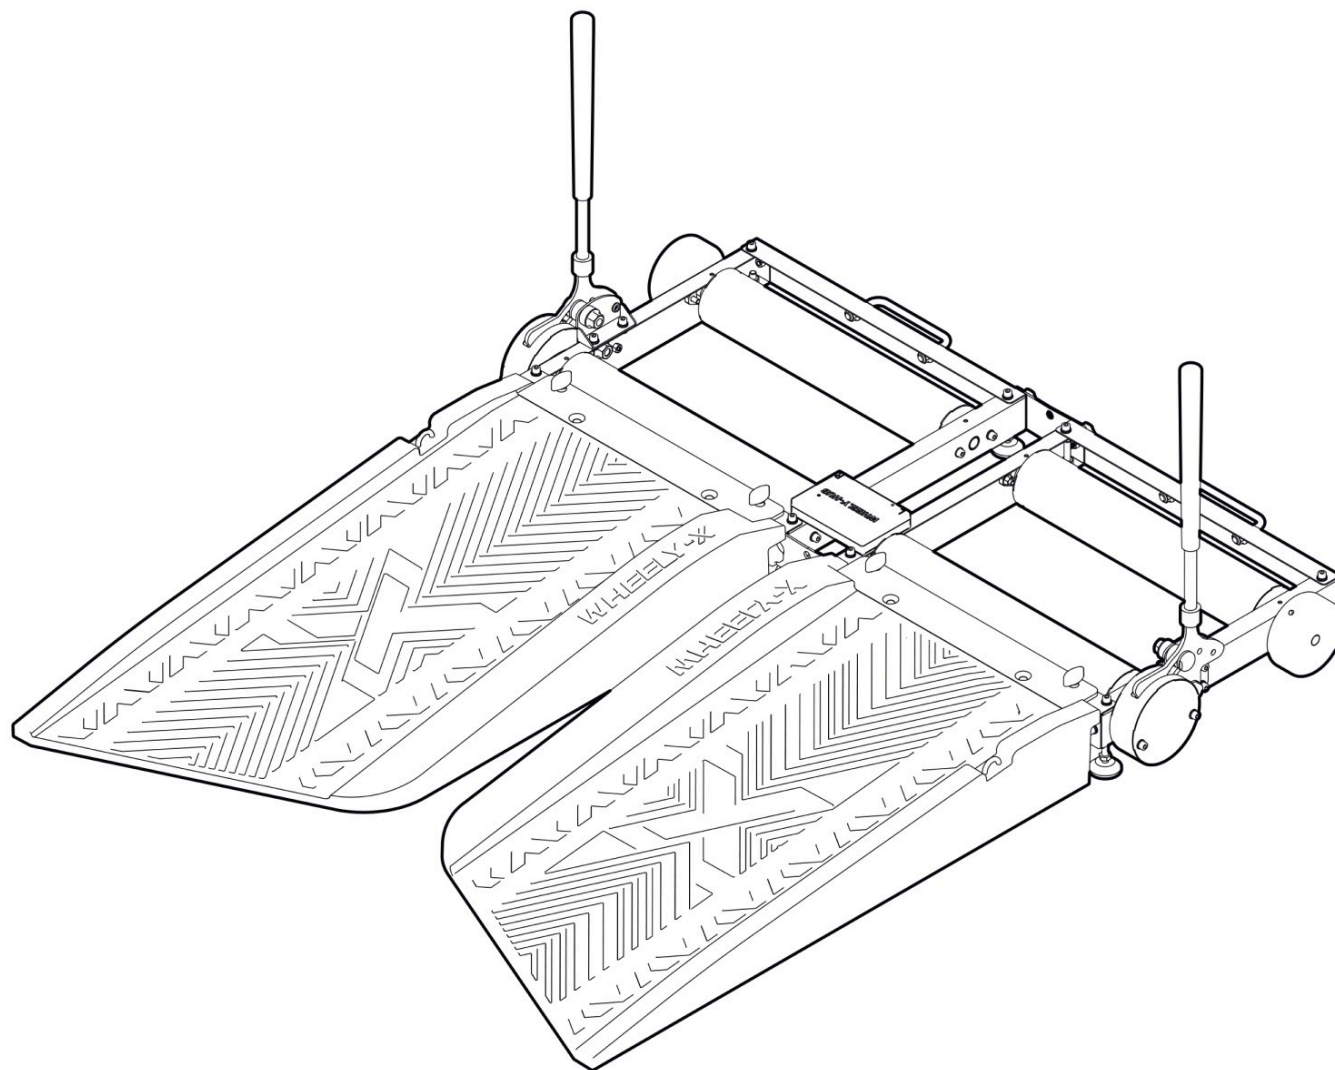

2026.10 · English

KANGSTERS

Receive · Set Up

You collect the rental equipment from our dispatch site and set it up yourself. Even first-timers need only 2 people and 30 minutes. Use this guide together with the WHEELY-X Quick Starter (in the box) and the setup video (kangsters.com/en/downloads).

What you need (at the venue)

- A flat floor about 2 m × 1.2 m (WHEELY-X) + space for the StanbyME GO in front of the ramps
- A 220 V outlet (power strip included)
- Internet (Wi-Fi) if possible — for online mode and updates
- Any other manual wheelchair: tire pressure 65 psi or more (1 is included)



Check on Arrival

Open the 5 pieces (2 bags, box, StanbyME GO, manual wheelchair) and tick each item. If anything is missing or damaged, contact us before use (+82-31-506-0625). Damage found after use may be treated as damage during the rental.

WHEELY-X bag

- ☐ Rollers ×2 (left · right) · detachable weights fitted
- ☐ Ramps ×2
- ☐ Roller locking levers ×2
- ☐ Roller connector plates ×2 + cross bolts ×4
- ☐ T-bolts ×4
- ☐ Wheelchair safety hooks ×2

Accessory box

- ☐ T-wrench ×1 · WHEELY-Hub ×2
- ☐ USB to C charging cable ×2
- ☐ HDMI cable ×1 · LAN cable ×1
- ☐ Power strip ×2 · tape
- ☐ Cutter ×1 · scissors ×1 · marker pen ×1
- ☐ Safety chest belt

Other pieces


- ☐ Laptop bag: gaming laptop + charger (8 games installed)
- ☐ LG StanbyME GO: screen + remote + power cord
- ☐ Manual wheelchair

Also included

- ☐ Rental checklist (in the box)
- ☐ WHEELY-X Quick Starter
- ☐ User Card — Before You Ride

* The rental checklist in the box is the reference for detailed items and quantities, including cables. Contact us if anything differs.

Set Up — 4 Steps

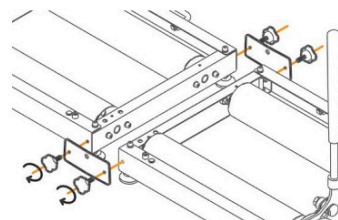

1 Assemble

Follow pages 2–3 of the Quick Starter: rollers → levers → connector plates · cross bolts → ramps → T-bolts → WHEELY-Hub. Ramp logos face inward.



2 Place the Display

Stand it about 1.3 m beyond the end of the ramps, where the user will look, and plug in the power cord. Plug one end of the HDMI cable into the StanbyME GO.



3 Connect the Laptop

Put the laptop beside WHEELY-X and plug in its charger. Plug the other HDMI end into the laptop and the WHEELY-Hub USB-C cable into a laptop USB port. Hub switch ON.



4 Power On and Check

Turn on the laptop and press Windows key + P → "Duplicate" to mirror it on the StanbyME GO. Check the laptop's internet → start the AI Fit program, then open the game and spin the wheels.

Important The WHEELY-Hub USB-C cable is the signal cable. The game reads the wheels only when it is plugged into the laptop. If it still does not read the wheels, switch the hub off and on, then press Refresh in "Ant Journey".

Use · Return

The riding steps are in large print on the User Card — Before You Ride (in the box). Post it next to the StanbyME GO.

Questions · faults · return schedule

+82-31-506-0625

info@kang-sters.com

During the rental

- Manual wheelchairs only — no power wheelchairs or scooters
- Up to 150 kg including the wheelchair
- No modification or part replacement (take apart only to pack)
- No sub-lending to others
- Normal wear is fine; for intentional or negligent damage or loss you pay the repair cost or replacement value

Power On · Use · Power Off

Power on (start of each day)

- ① Power strip ON → StanbyME GO ON
- ② Laptop ON → check the picture appears on the StanbyME GO
- ③ WHEELY-Hub (sensor) switch ON
- ④ Check the laptop's internet → start the AI Fit program
- ⑤ Open the game "Ant Journey" → check the sensor with Refresh

During use

Before boarding, check both levers stand at 90°; hook on after boarding

After boarding, pull both levers back and start the game

To get off, push the levers forward to 90° → unhook → roll off slowly

Between users, check both levers are at 90°

Power off (end of day)

- ① Quit the game → shut down the laptop
- ② Hub switch OFF (saves battery)
- ③ StanbyME GO OFF → power strip OFF
- ④ Pack everything into the bags and box

If Something Goes Wrong

No picture on the StanbyME GO

Check both HDMI ends → set the StanbyME GO input to HDMI → on the laptop press Windows key + P → Duplicate

The game does not read the wheels

Hub switch ON and USB-C in the laptop → switch the hub off and on → Refresh at the top right of "Ant Journey" → close and restart the game

Hub LED blue + beep

Battery below 33%. Charge from the laptop USB or a 5V 1A charger (no fast chargers)

Ramps rattle

Take out the T-bolts and screw them back in all the way


Returning

Before packing

- ☐ Hub switch OFF, laptop shut down
- ☐ Take apart (Quick Starter in reverse): WHEELY-Hub → T-bolts → ramps → cross bolts · plates → levers
- ☐ Wipe parts with a dry cloth and count them against the checklist
- ☐ Pack into the bags and box you received; return all 5 pieces incl. StanbyME GO and wheelchair
- ☐ Keep each cable in the same bag or box as its device

Return terms

- Return to the dispatch site: SUPEX Building, KAIST Seoul Campus, 85 Hoegi-ro, Dongdaemun-gu, Seoul. The customer arranges and pays for transport.
- Late returns are charged the rental fee for each extra day.
- Tell us about any damage or loss before returning. Sending photos speeds things up.
- After the return, Kangsters inspects the equipment; the rental ends when everything checks out.

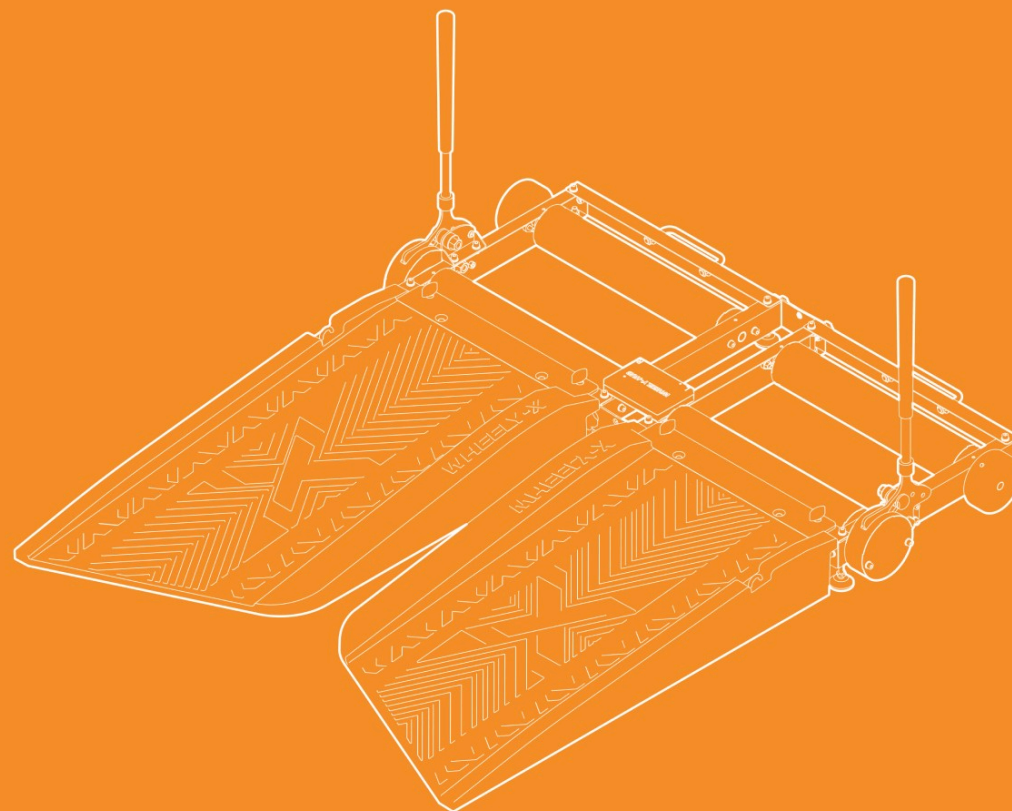

WHEELY-X

EMPOWERING EVERYBODY TO THRIVE

KANGSTERS